


Instructions for putting together Baltic Kitchens Knock Down Cabinets

**Side Post should show 1 1/4" above flat surface
screw up or down to achieve required height**

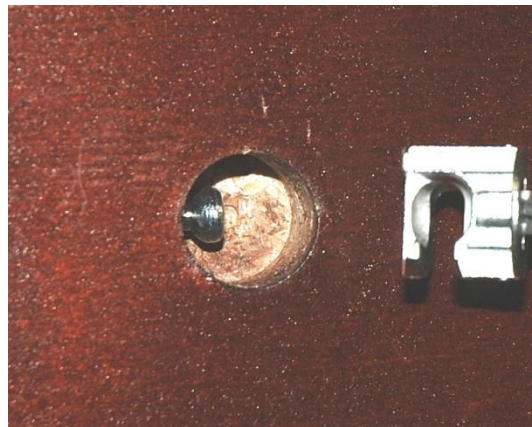

Cam Locks, twist clockwise to secure



To finish, cover cam locks with plastic cover

