


Base Corner

Carcass:

Lay sides B & C (Rear Right & Left side panels) face down so the holes show

Insert side posts to plastic holders


The height of the pins should be 1 ¼" from the flat surface

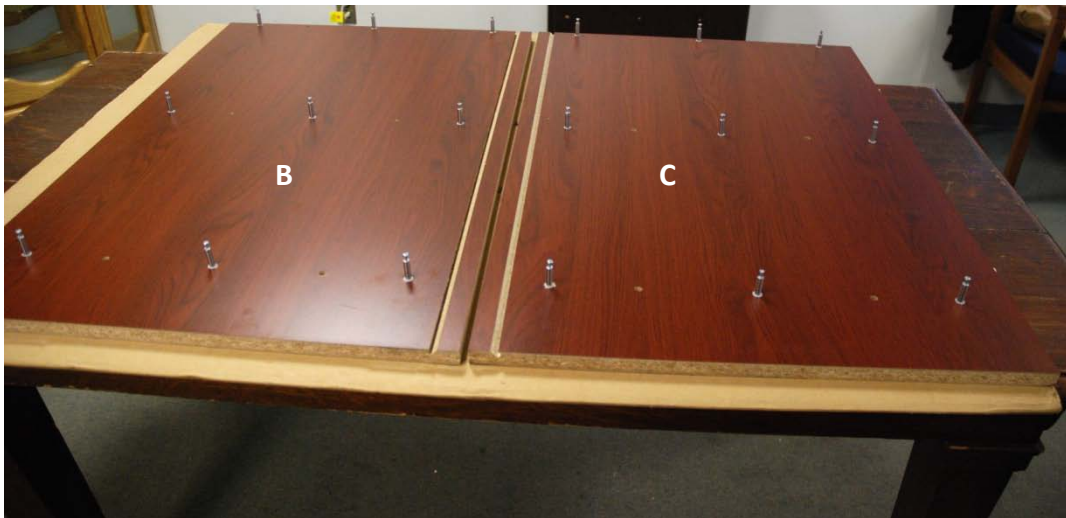


Then lay sides A & D (Front Right & Left side panels) face down so the holes show

Insert side posts to plastic holders

The height of the pins should be 1 ¼" from the flat surface

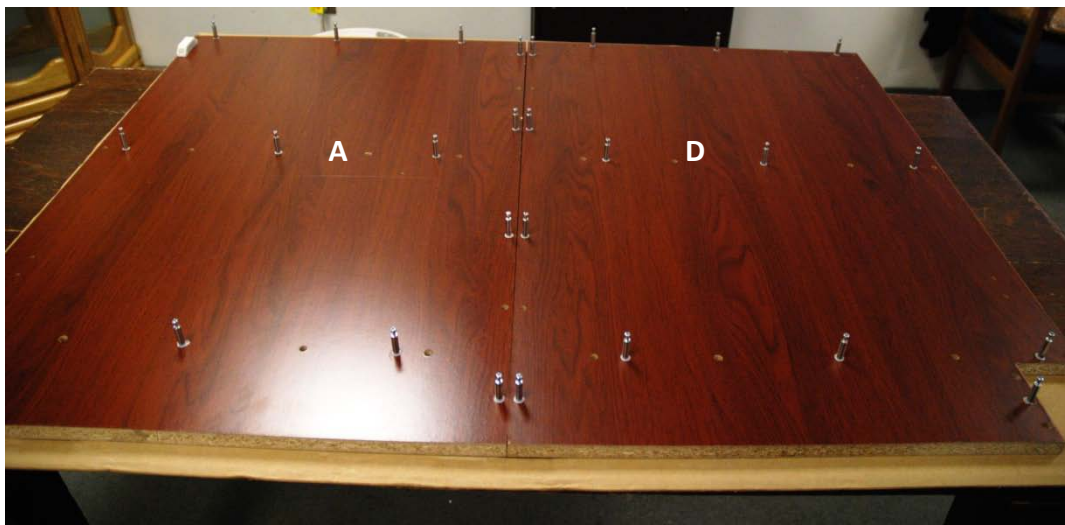

Starting with Piece B (rear right side panel) groove up, attach E (Bottom Panel) cam lock
Then attach F(Shelf) and G (top panel) to B and cam lock
Now attach A (Front Right Side Panel) to B, E, F, G cam lock
Attach C (rear left side panel) to E, F, and G

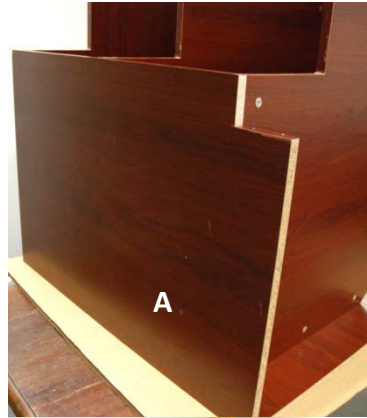

Cam lock D (Front left side panel) to the remaining dowels showing
Attach I (toe kick) to the bottom of E and to the sides of A & D, cam lock



**Slide in H (Back Panel) to grooves of B and C
Stand Unit up to attach hinges & doors**



**Fasten hinges onto doors
smaller hinges are used to connect the doors together,
the large hinges hook up to the hinge side mount, which is connected to either A or D
depending on which way the door is to be opened
After attaching the doors, adjust hinges as needed to level doors and centre fold.**

