


# **Blind Wall Cabinet**

*Carcass:*

Lay piece A & F (Right & Left side panel) down holes showing.

Insert side posts to plastic holders

The height of the pins should be 1 ¼" from the flat surface

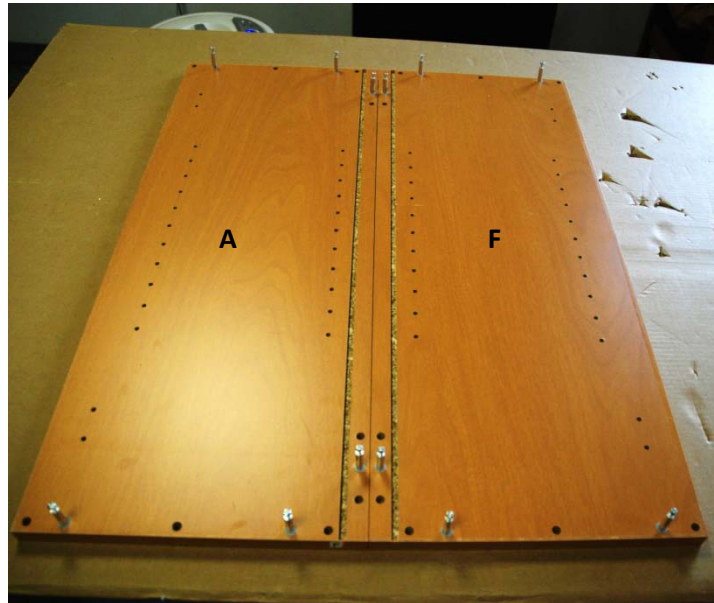

Attach the following to side A and cam lock into place:


Insert B (bottom panel) to bottom of A

Attach C (top panel) to the top of A

Slide in F (back panel)

Now attach the 2 pieces D1 & D2 (lower & upper back supports)

The grooves will line up into your top & bottom panels, cam lock all pieces

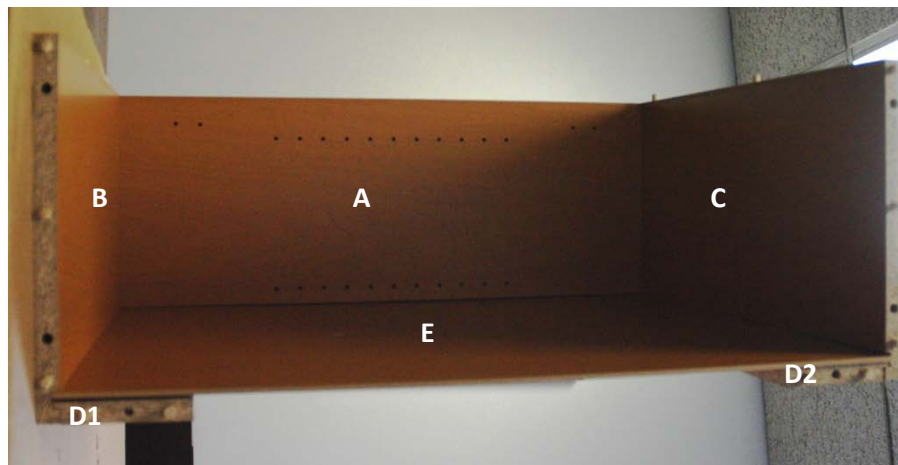

**Now attach F to the dowels showing**

**Then insert shelf supports at desired heights**

**Attach hinge backing for easier door assembly**



**Stand unit up to attach G (front cover panel) cam lock**

**Then insert shelves**



**Lastly attach hinges to door, and then clip onto hinge backing already attached to your cabinet carcass**

