


# Lazy Susan

*Carcass:*

Lay sides A,B,C,D (Front & Rear side panels) face down so the holes show

Insert side posts to plastic holders

The height of the pins should be 1 ¼" from the flat surface

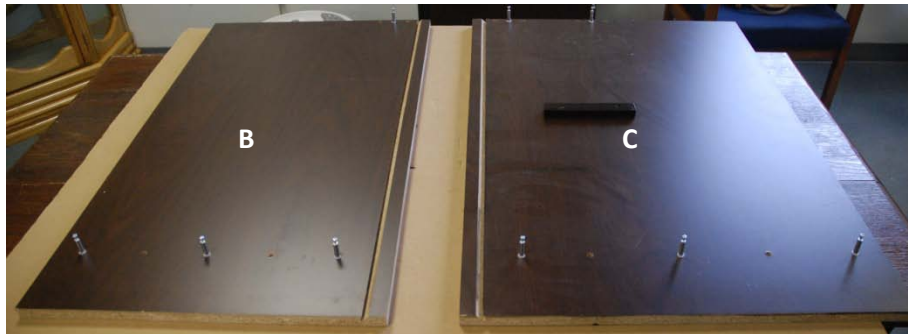


Starting with Piece B groove up, attach E (Bottom Panel) cam lock

Now attach A (Front Right Side Panel) to B & E, cam lock


Cam lock H (angle cut Top Support) to the back of B, cam lock H (long Top Support) to A

Now attach H (short Top Support) to H (long Top Support) and cam lock

Slide in F (Back Panel) to grooves of B, E, H

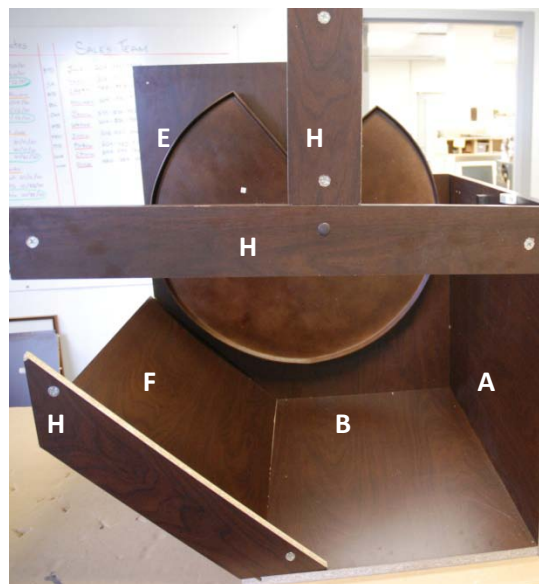

Now attach C to E, F, H (angle) H(long)

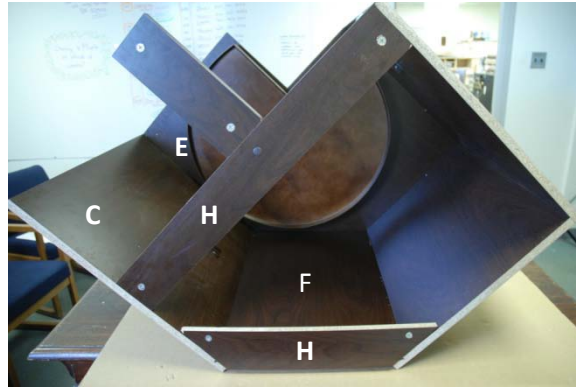


While the cabinet is still lying down, make sure to cam lock your toe kicks (J1), (J2) into place



Stand unit up

Insert G (Shelves/Lazy Susan) screw down

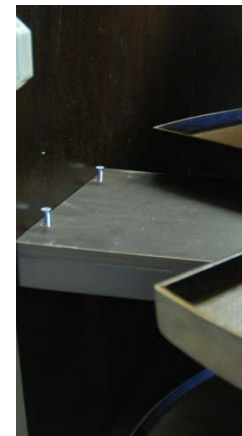

**Attach D to E, C and H (short Top Support) cam lock**



**Now fasten hinges onto doors**  
smaller hinges are used to connect the doors together,  
the large hinges hook up to the hinge side mount, which is connected to either A or D  
depending on which way the door is to be opened  
After attaching the doors, adjust hinges as needed to level doors and centre crack.

