


# Wall Corner Cabinet

## *Carcass:*

Lay sides B, E, A & F (Back panels & Front panels) down so the holes show



Insert side posts to plastic holders

The height of the pins should be 1 ¼" from the flat surface

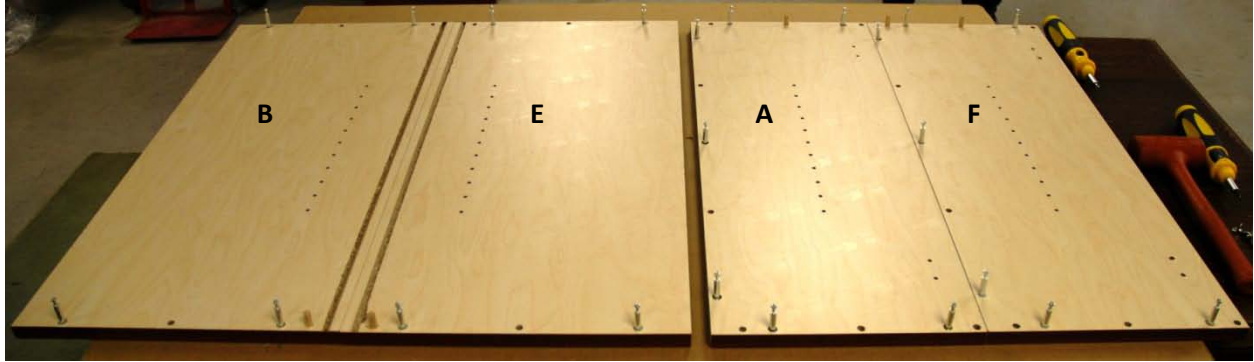


Starting with Piece B attach D & C (Top & Bottom panels) cam lock



Then slide in G (Back panel)

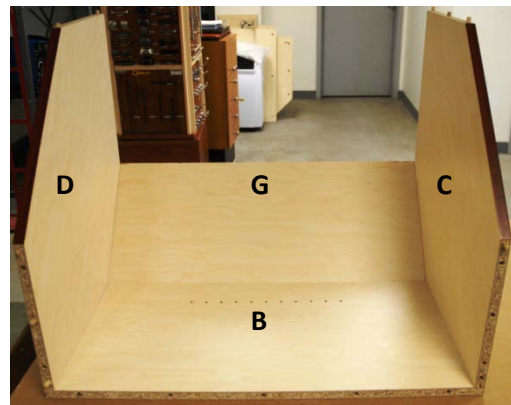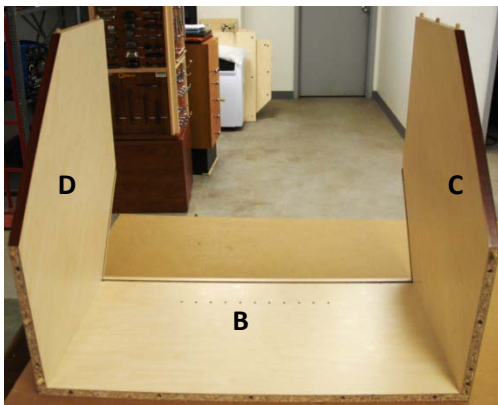

Now attach E and cam lock

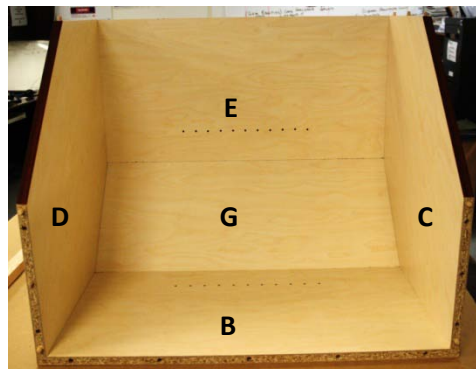

Lay F on top of E, D and C knock into place and cam lock.  
Then attach A to B, C, D and cam lock

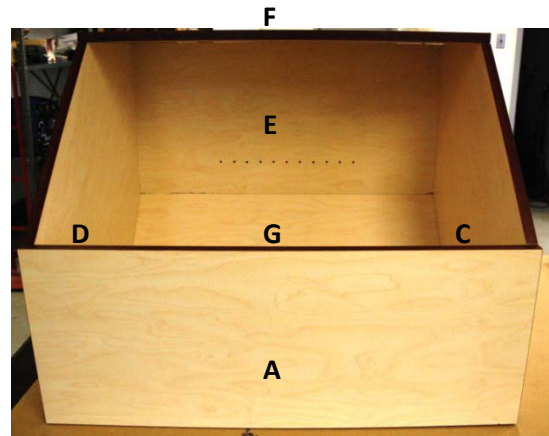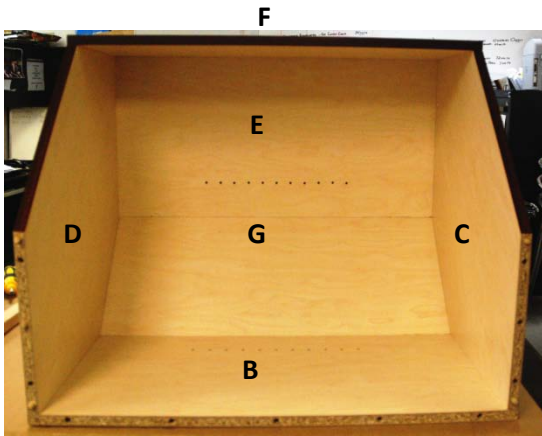

Stand unit up for easier access when attaching the door



### *Door*

Place door face down  
Insert Hinges into circle cut outs  
Screw into place  
Attach door to make either a Left open or Right open cabinet  
(screws are already on Hinges for easy assembly)

Insert shelf using the 4 supports included. Shelf height is adjustable.



Lastly adjust the door if need be by tightening or loosening hinge screws.

The screws that are not connected to either the carcass or door adjust the door left, right, front and back.

**BALTIC**  
**KITCHENS**