


Wall Microwave Cabinet

Carcass

Lay Pieces A & G (Right and Left side panel) face down so the holes show.
Insert side posts to any hole with a plastic surround.
The height of the pins should be 1 ¼" from the flat surface



Attach the following to side A and cam lock into place:
Insert D (bottom panel) to bottom of A
Attach B (top panel) to the top of A
Slide in F (back panel)
Now attach the 2 pieces E (upper & lower back supports)
The grooves will line up into your top & bottom panels

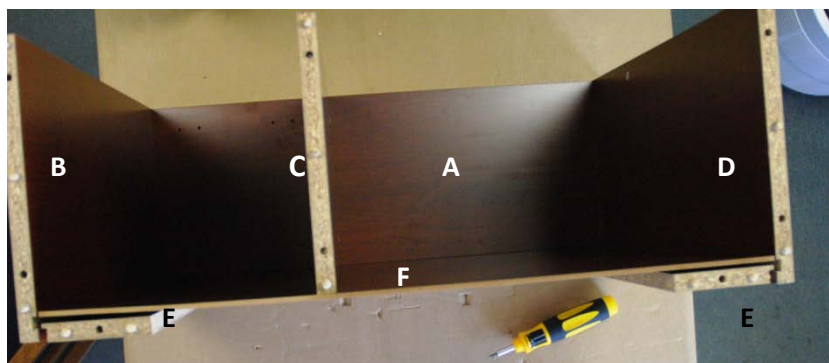

**Now attach piece G to the dowel's showing
Turn unit to upright position and screw on I (Shelve)**



Doors

**Place doors face down
Insert Hinges into circle cut outs
Screw into place
Attach door to your left and right side panel (s) (screws are already on Hinges for easy assembly to carcass)**

Adjust the door if need be by tightening or loosening hinge screws. The screws that are not connected to either the carcass or door adjust the door left, right, front and back.

