

# Tall Pantry Cabinet

*Carcass:*

Lay piece A & G (Left & Right side panel) down holes showing.

Insert side posts to plastic holders

The height of the pins should be 1 ¼" from the flat surface



Attach the following to side A and cam lock into place:

Insert B (bottom panel) to bottom of A

Attach D (top panel) to the top of A


C (center panel) gets put into place next

Now attach the 2 pieces E (back upper & lower supports) with grooves in them to B & D

The grooves will line up into your top & bottom panels, cam lock all pieces

Cam lock the remaining E pieces that do not have grooves

Now attach your toe kick I and cam lock

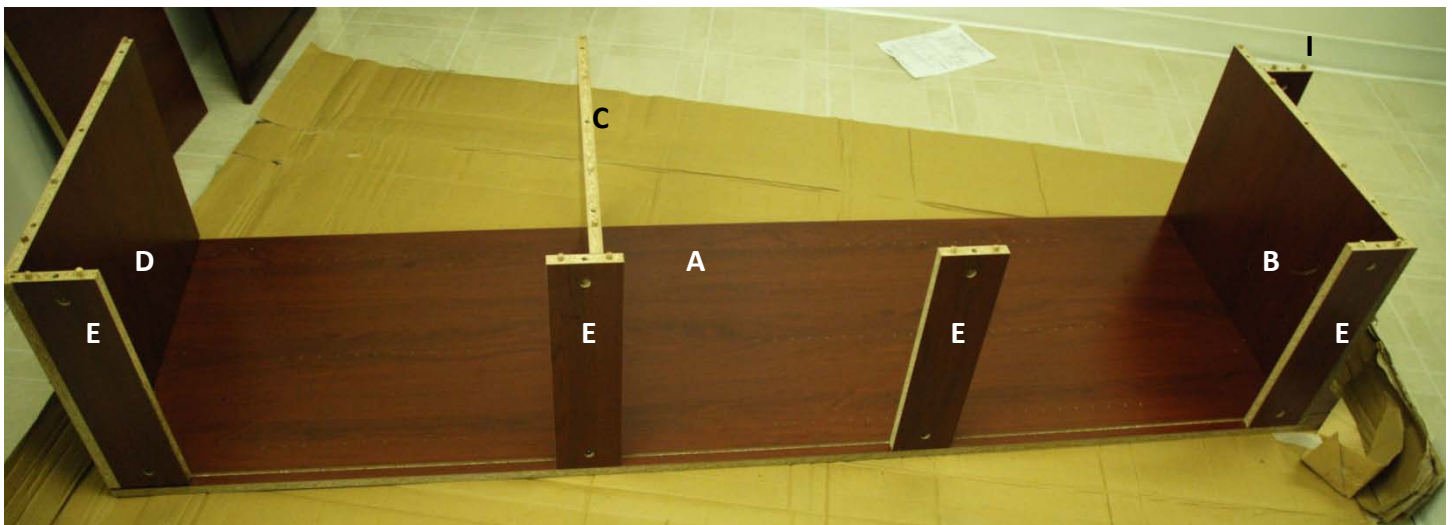

**Lastly slide in F (Back panel)**



**Now attach G to the dowels showing and cam lock into place and stand unit up**

**Then insert shelf supports at desired heights**

**Attach hinge backing for easier door assembly**



**Lastly attach hinges to door, and then clip onto hinge backing already attached to your cabinet carcass**

