



FRAMELESS BLIND BASE CABINET

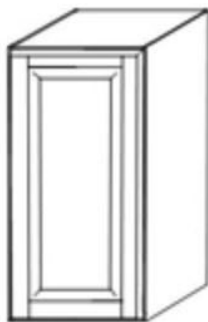

W09-21

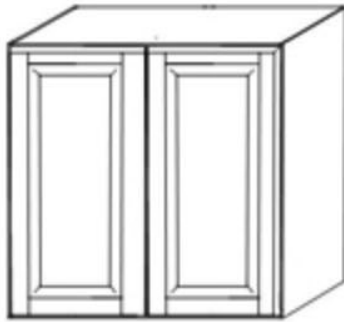


W24-36

CABINET COMPONENTS:


- A Right Side Panel
- B Bottom Panel
- C Top Panel
- D Back Support (Upper & Lower)
- E Back Panel
- F Left Side Panel
- G Door
- H Shelves

HARDWARE:

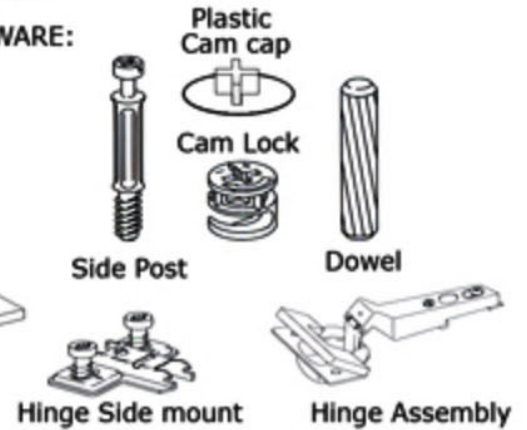


White
Wood
Glue

white glue applied
to each dowel and
dove tail for stability
(wood glue not
included)

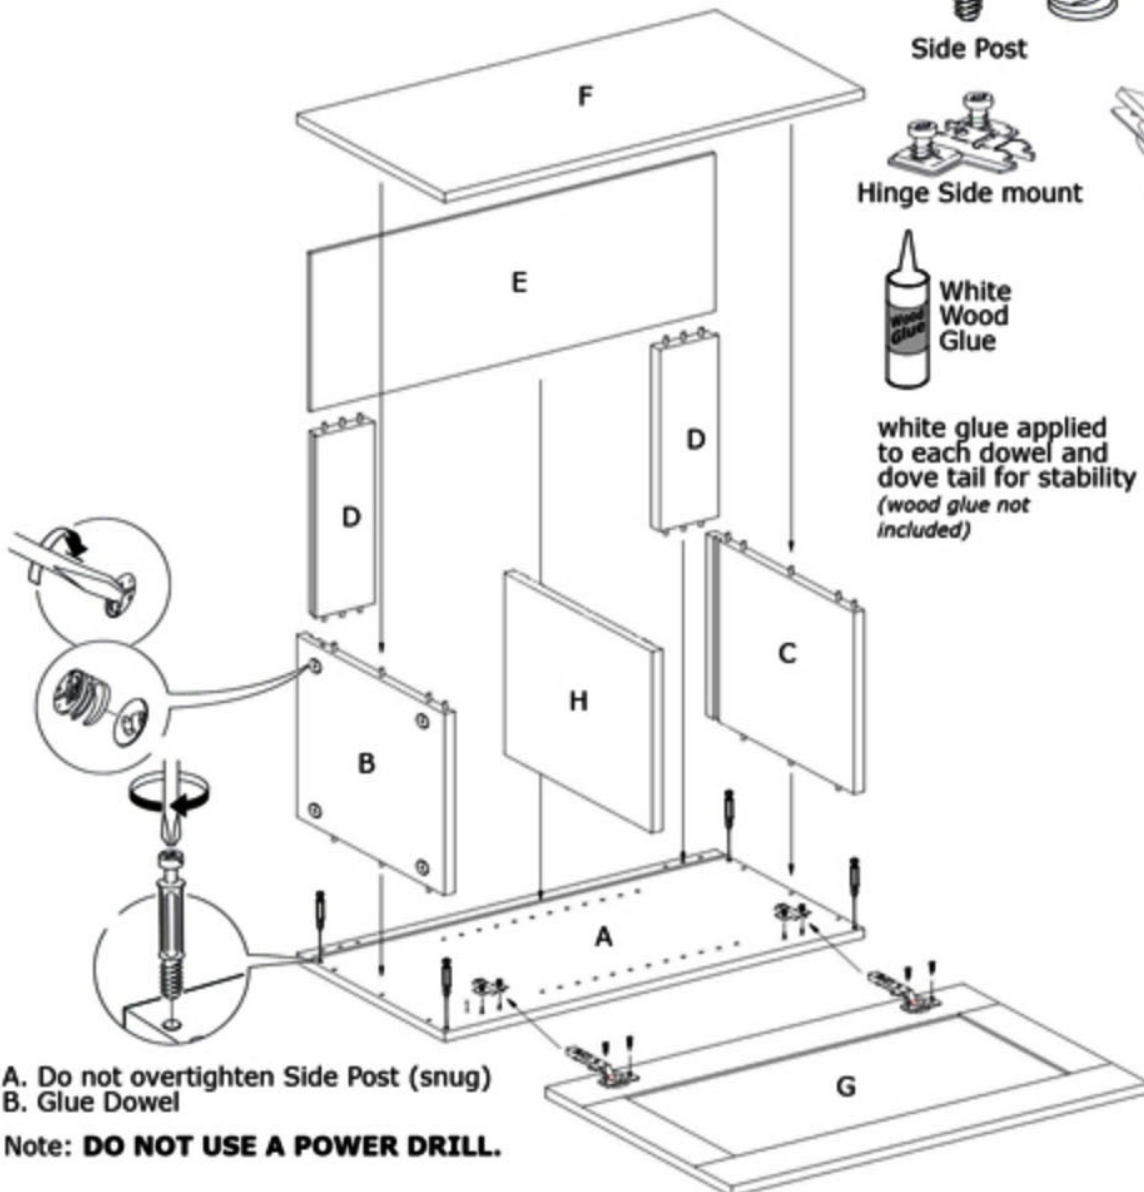


BASE BLIND CORNER CABINET

1

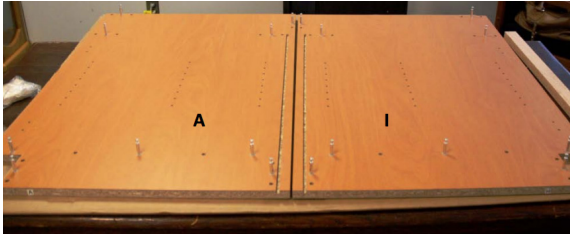


- Lay sides A & I (right & left side panel) face down so the holes show
- Insert side posts to plastic holders
- The height of the pins should be 1 ¼" from the flat surface.

2

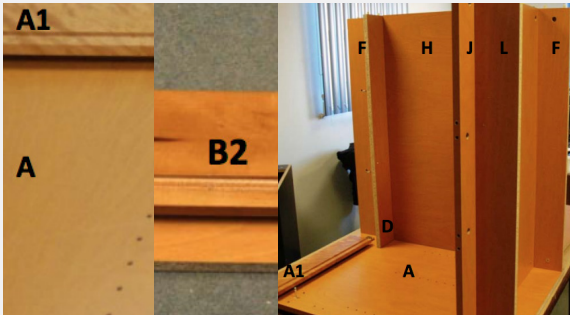

- Attach A1 (right side drawer panel) to piece A
- B2 attaches to E (center support panel)
- Attach the following pieces to A and cam lock
- Insert J (bottom panel) to the bottom of A
- Attach L (toe kick) groove up to the front left corner underneath J
- Attach F (back lower support) to the back left corner underneath J
- Place D (top back panel) just under A1.
- Grooves should align and other F piece (back upper support) slides into the top groove of D
- Next slide in H (back panel) to D and J

3

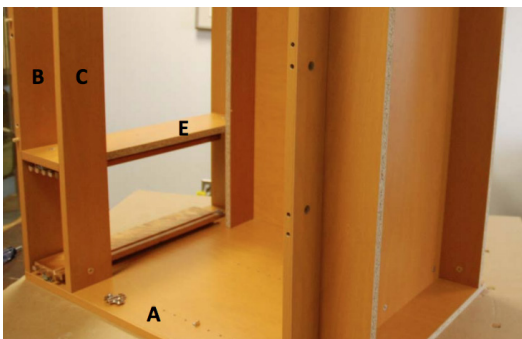

- Now attach piece E that has B2 connected to it to F and cam lock
- Then attach B (top front support) to the top left corner above your slides, depending on which side you want your blind corner to be will decide which holes need side posts on pieces E & C
- Make sure you are using the piece with the dowels pointing out for your top piece
- Once B is attached and cam locked, take piece C (top bottom support) and attach it to A, E and cam lock

4



- Place door(s) face down
- Insert hinges into circle cut outs
- Screw into place
- Attach door to your left or right side panel(s) to make either a left open or right open cabinet
- Screws are already on hinges for easy assembly to carcass

BASE BLIND CORNER CABINET

5




- Now attach I to the dowels showing and stand unit up
- Attach your hinge backing and shelf supports
- Detach A1 & B2 from A & H (sliders come off, using the black clip attached to slider)
- Left side push up, right side push down and then pull I drawer slides out until drawer side is free

6




- Lay E5 (front panel) face down so the groove shows
- Place a small glue line into groove and insert C3 (bottom panel)
- Attach A1 & B2 to C3. Dove tails will line up. Again place a small glue line into each groove
- Knock into place for a snug fit
- Lastly apply D4 (back piece) to dove tails, glue and knock into place
- Let glue dry
- Then line up drawer slides and push drawer into carcass insert shelf (G)

7

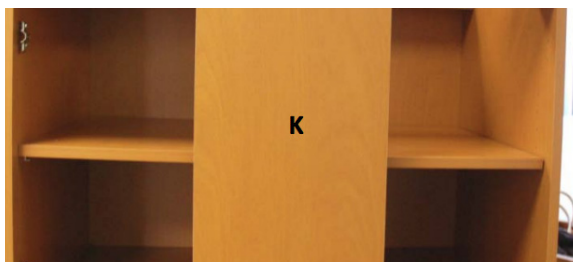

- Now attach K (front cover panel) cam lock at the top and bottom

8

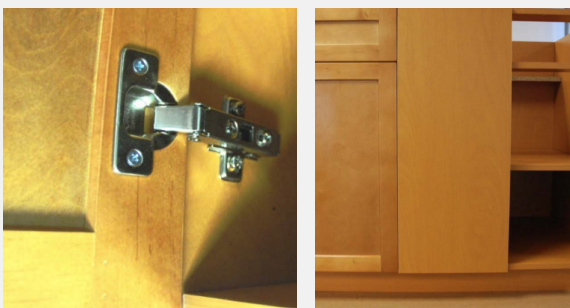

- Lastly, attach your hinges to your door and clip door onto hinge backings