


WM2730


CABINET COMPONENTS:

- A Right Side Panel
- B Top Panel
- C Middle Panel
- D Bottom Panel
- E Back Support
- F Back Panel
- G Left Side Panel
- H Door Front
- I Shelf

HARDWARE:

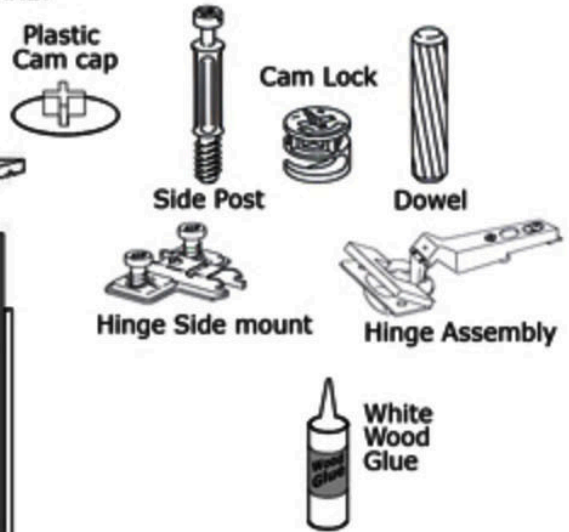

white glue applied to each dowel and dove tail for stability
(wood glue not included)

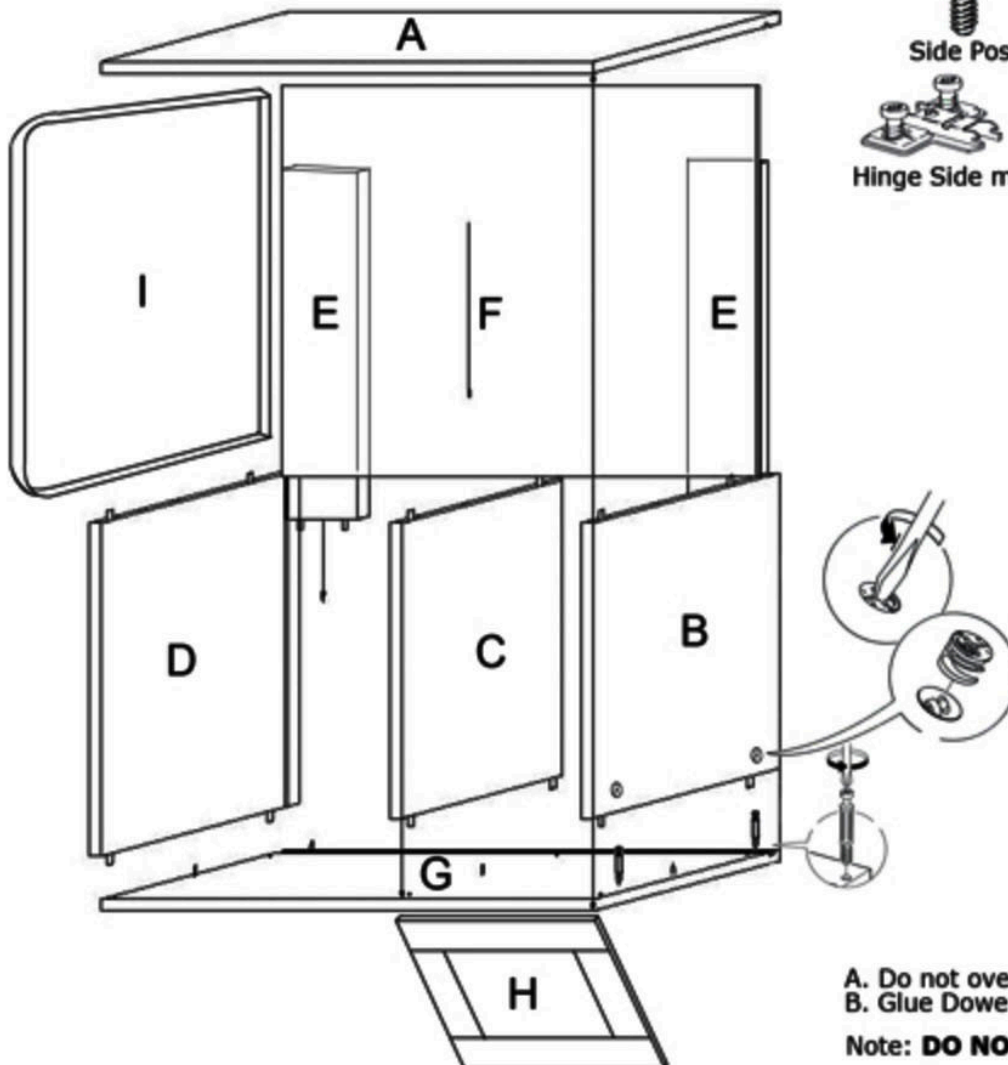


- A. Do not overtighten Side Post (snug)
- B. Glue Dowel

Note: DO NOT USE A POWER DRILL.


WALL MICROWAVE CABINET

1

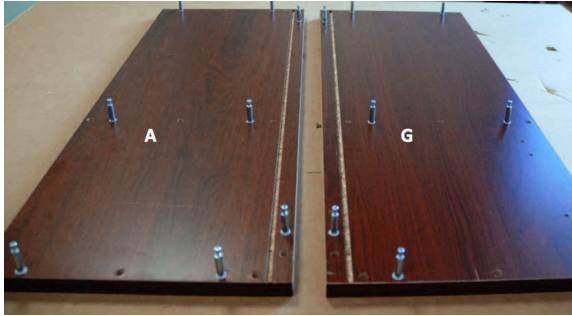

- Lay Pieces A & G (right and left side panels) face down so the holes show
- Insert side posts to any hole with a plastic surround
- The height of the pins should be 1 1/4" from the flat surface

2

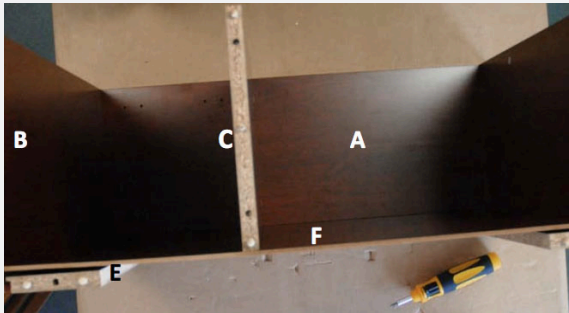

- Attach the following to side A and cam lock into place
- Insert D (bottom panel) to bottom of A
- Attach B (top panel) to the top of A
- Slide in F (back panel)
- Now attach the 2 pieces to E (upper & lower back supports)
- The grooves will line up into your top & bottom panels

3



- Now attach piece G to the dowels showing
- Turn unit to upright position and screw on I (shelf)

4



- Place doors face down
- Insert hinges into circle cut outs
- Screw into place
- Attach door to your left and right side panel(s) (screws are already on hinges for easy assembly to carcass)
- Adjust the door if need be by tightening or loosening hinge screws
- Adjust the screws that aren't connected to either the carcass or door to the left, right, front and back