


FRAMELESS BLIND BASE CABINET

3/4" Plywood With Birch Veneer Box

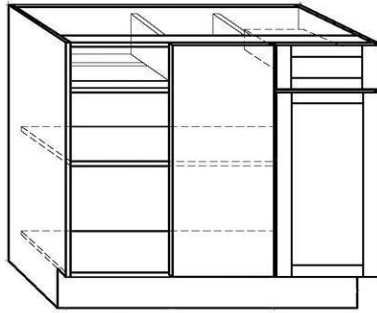

BBC30-BBC42

CABINET COMPONENTS:

- A Left Side Panel
- B Top Front Panel
- C Bottom Panel
- D Top Back Panel
- E Toe Kick
- F Back Support Panel
- G Back Panel
- H Right Side Panel
- I Door Front
- J Shelves
- K Center Support Panel
- L Front Cover Panel



White Wood Glue

HARDWARE:




Side Post




Cam Lock




Plastic Cam cap



Dowel




Hinge Side mount






Hinge Assembly

DRAWER COMPONENTS:

- A1 Left Side Panel
- B2 Right Side Panel
- C3 Bottom Panel
- D4 Back Panel
- E5 Front Panel

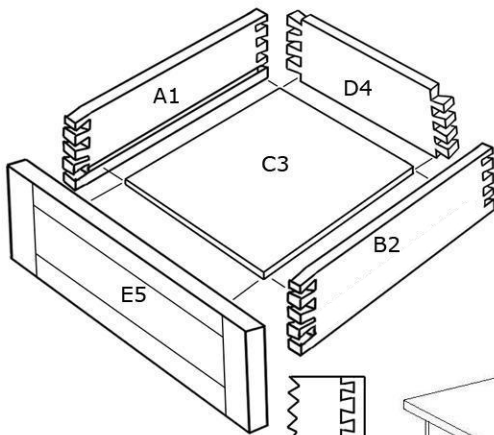

DOVE TAIL

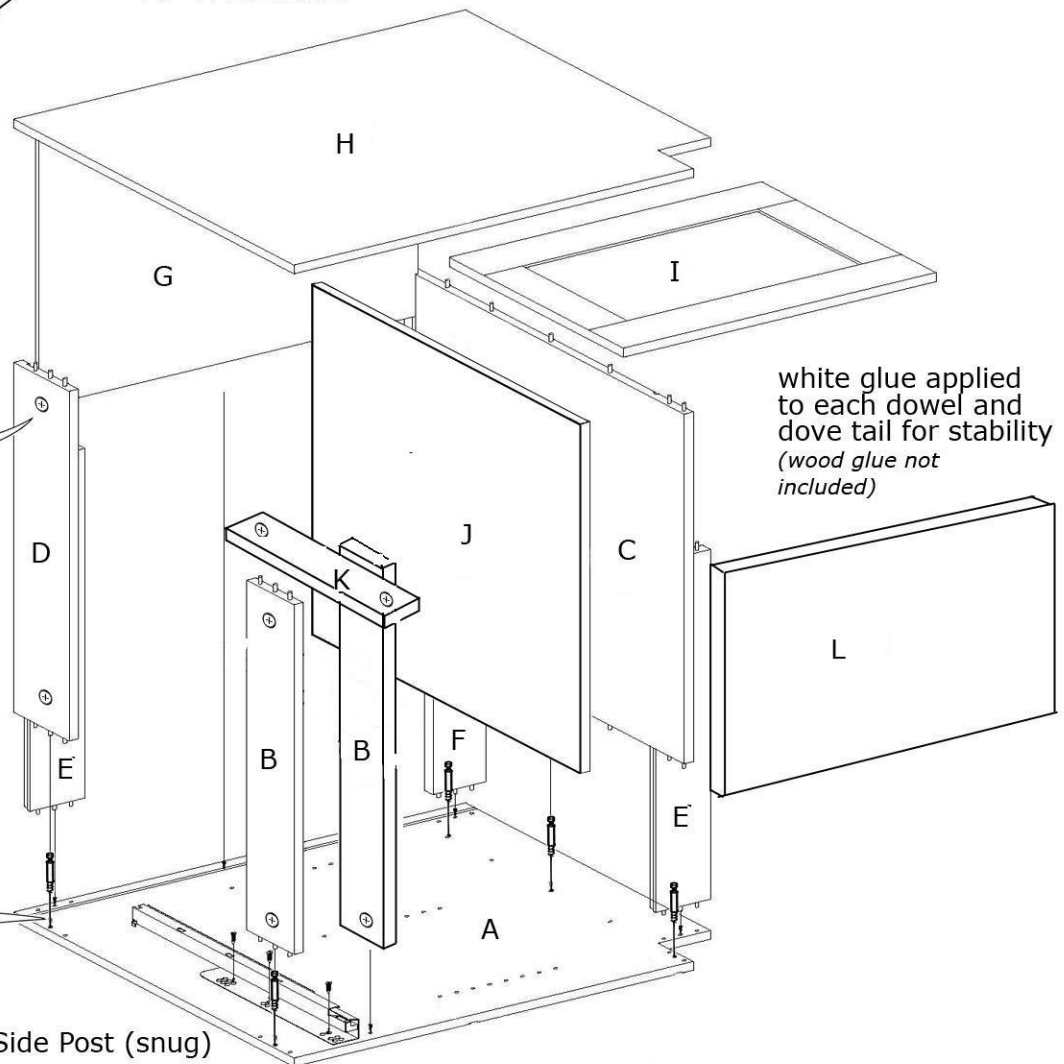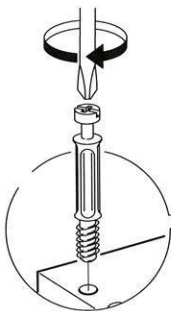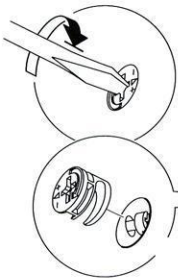

white glue applied to each dowel and dove tail for stability
(wood glue not included)

- A. Do not overtighten Side Post (snug)
- B. Glue Dowel

Note: **DO NOT USE A POWER DRILL.**