




FRAMELESS VANITY CABINET

3/4" Plywood With Birch Veneer Box

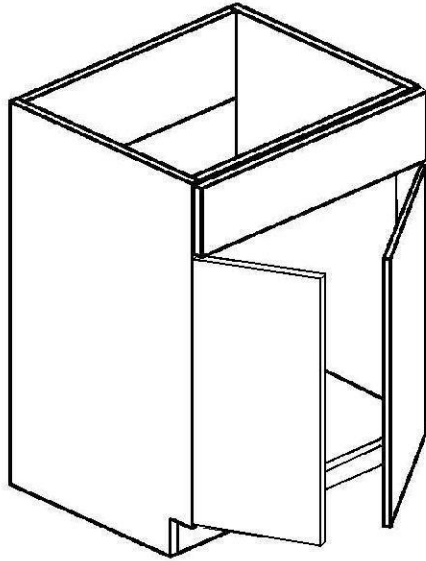

CABINET COMPONENTS:

- A Left Side Panel
- B Top Front Panel
- C Bottom Panel
- E Toe Kick
- F Back Support (Upper & Lower)
- H Right Side Panel
- I Door

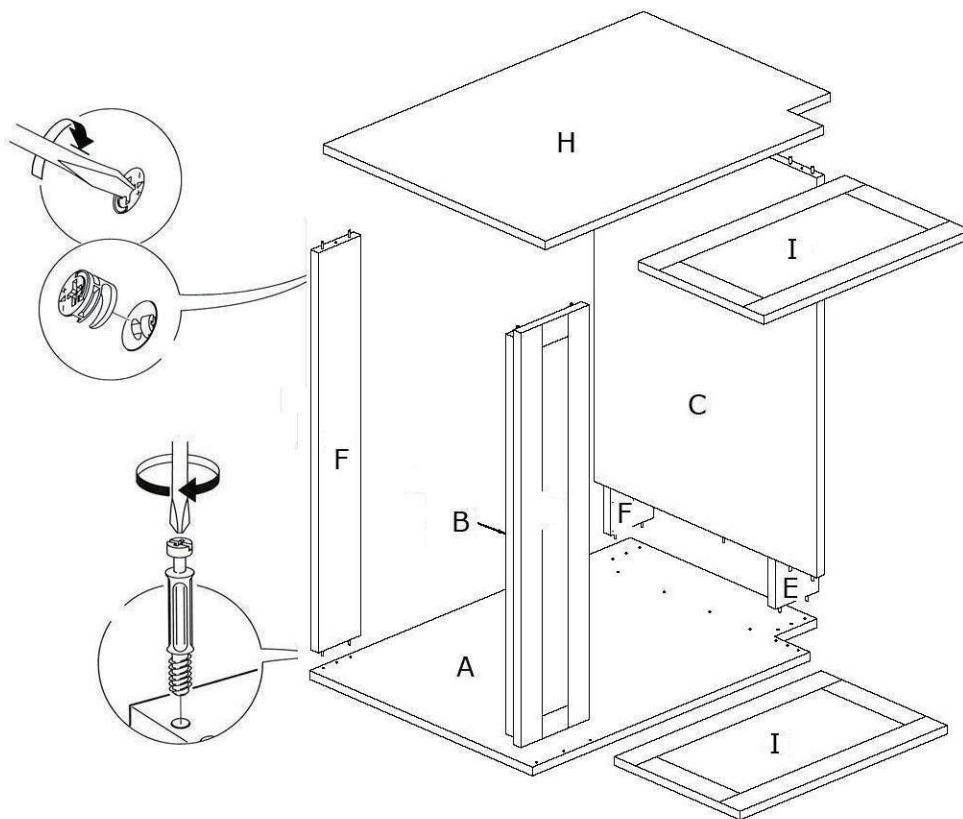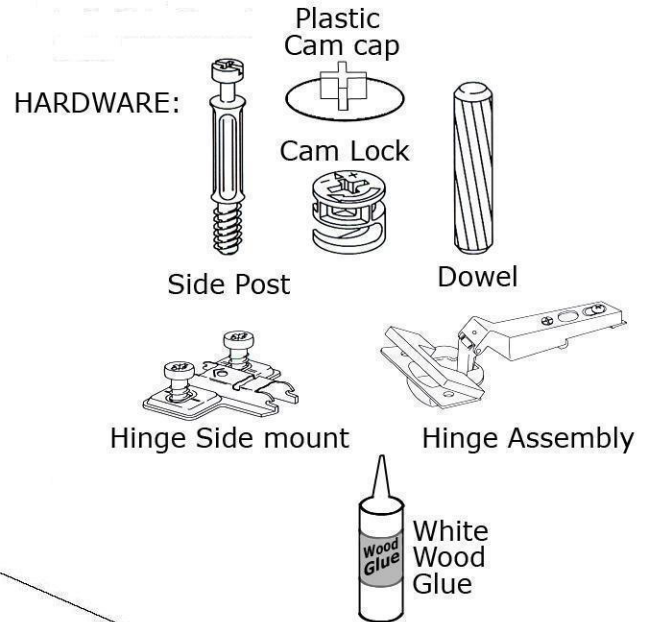

white glue applied
to each dowel and
dove tail for stability
(wood glue not
included)

- A. Do not overtighten Side Post (snug)
- B. Glue Dowel

Note: **DO NOT USE A POWER DRILL.**